


INSTALLATION MANUAL

Product & Accessory

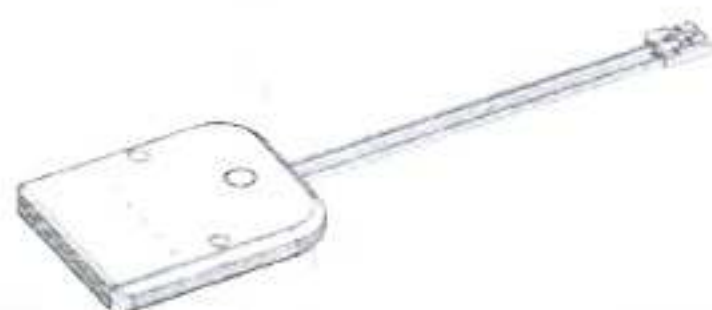

1x6-channel asynchronous RF wireless receiver




2xscrews

A1



wireless control distance <10M

A2

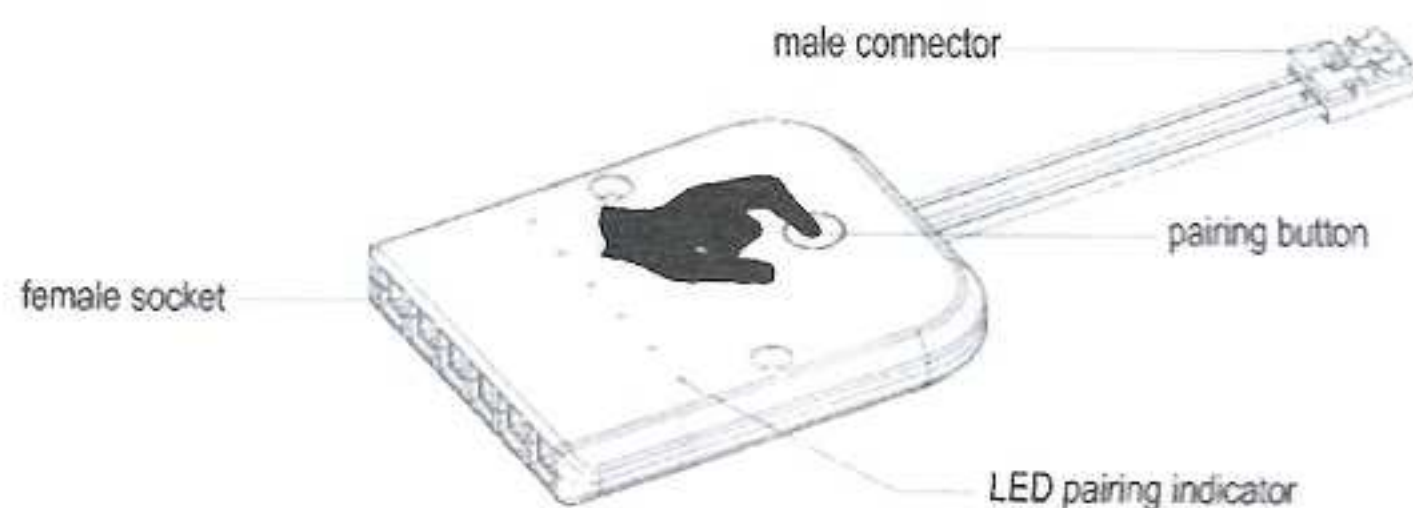

female socket

male connector

pairing button

LED pairing indicator

1. There are 6 LED pairing indicators, each indicator corresponds to a channel, when the indicator is on, the corresponding channel can be paired/unpaired.
2. Short press pairing button, the pairing indicators will go on in the order of full, 1st channel, 2nd channel, 3rd channel, 4th channel, 5th channel, sixth channel in sequence.
3. One receiver can be paired with multiple emitters, each channel can be paired with 4 emitters max. with totally 6 channels.

A3



LDS666



LS96669

1. The 6-channel asynchronous RF wireless receiver could be paired and used with different function of wireless emitters of LUMILAND.

Pairing:

1. When pairing indicator of a corresponding channel is on, short press the pairing button on the emitter, it is successfully paired when the output light flash three times.

Unpairing:

1. When pairing indicator of a corresponding channel is on, long press the pairing button on the emitter over 3 seconds, it is successfully unpaired when the output light flash three times;
2. Long press the pairing button on the receiver over 5 seconds to unpair all the 6 channels.